

MODENA

User Manual Book

Vacuum Cleaner

VC 5052 SAWH

TABLE OF CONTENT

Part 1: Important Safety Information	3
Safety Instruction	3
Warning	3
Electric Shock Hazard	3
Other Dangers	4
Part 2: Product Introduction	4
Product Components	4
Accessories	5
Indicator Description	5
Part 3: How to Use	6
Connection	6
Frame Mounting	6
Opearation	7
Part 4: Maintenance	9
Part 5: Troubleshooting	11
Part 6: Specification	11

This manual book explains everything you need to know about your new product. Please contact our Customer Care should you need further assistance through www.modena.com.

PART 1: IMPORTANT SAFETY INFORMATION

Safety Instructions

Before first use of this product, please read this manual carefully. This vacuum cleaner is for personal use, not for commercial use. The manufacturer will not be responsible for any damage that may result from improper use or incorrect operation. This vacuum cleaner only uses the original filter, original spare parts, accessories, or optional accessories. This vacuum cleaner is not suitable for:

1. Vacuum a person or animal.
2. Suck small creatures (e.g. flies, spiders, etc.).
3. An object that is harmful to health, has sharp edges, or is hot or glowing.
4. A moist or liquid substance. Flammable or explosive materials and gases.

Warning

Do not allow children to play with the equipment.

1. Do not allow persons (including children) with physical, mental or sensory disabilities to use or operate the product.
2. Only use the attached original charger or the charger approved by the manufacturer to charge the device.
3. Turn off the equipment and unplug the power plug before performing all maintenance work.
4. Do not open the battery pack. Repair should only be performed by qualified personnel.
5. Risk of injury. Do not use suction nozzle and straw to vacuum near the head.

Electric Shock Hazard

1. Do not insert conductive items such as screwdrivers or similar items into the charging socket.
2. The battery shall not be subjected to strong light radiation, heat and fire.
3. Do not touch contacts or wires.
4. Children are only allowed to use the machine under supervision.
5. Do not touch power plugs or sockets with wet hands.


6. The device can only be connected to alternating current. The supply voltage must be same as which given on the rating label.
7. Do not immerse the equipment in water.
8. Do not roll over, squeeze or drag the power cord through sharp edges, otherwise it will cause damage.

Other Dangers


1. Do not operate device in areas with explosion risk.
2. Do not suck fine flammable gases, liquids or dust.
3. Do not suck undiluted acids or bases.
4. No active metal particles (such as aluminum, manganese, or zinc) should be inhaled.
5. Do not suck burning or embers of objects.
6. In addition, the above substances will also cause corrosion of equipment materials.

PART 2: PRODUCT INTRODUCTION


Product Components

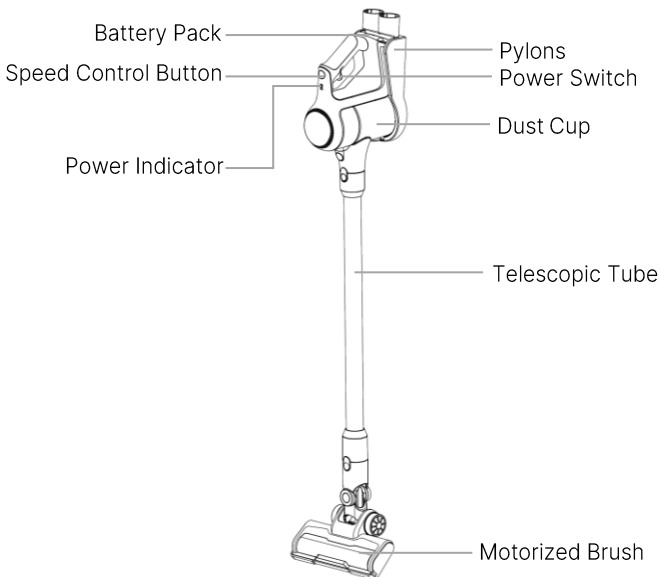

Accessories

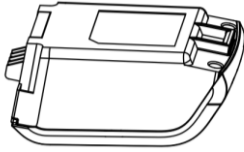


Battery Pack

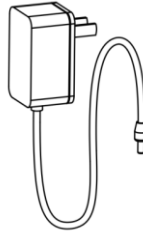

Charger




Crevice Nozzle

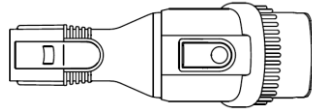

Bristle Brush

Indicator Description

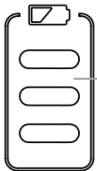

Electric Indicator

1. The power indicator can display the power of the current battery pack. As the power decreases, the indicator goes out gradually. When the power is 0%, the indicator flashes and the equipment stops working.
2. When the equipment is in charging state, the indicator light flashes.
3. When the equipment is in abnormal working state, the indicator will flash for 5 times, such as when the filter and floor brush are blocked.




Charging Light

- Red light is on: the battery pack is charging.
- Green light is on: the battery pack is fully charged, or the battery pack is not charged for other reasons.


PART 3: HOW TO USE

Connection

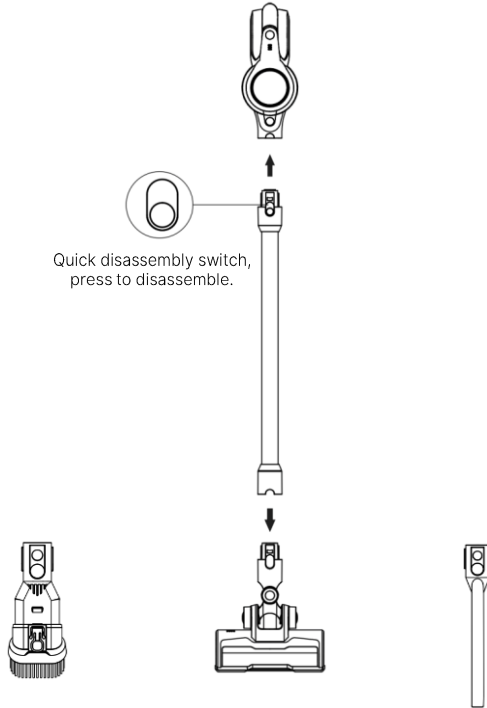

Frame Mounting

1. Drill two holes in the wall $\text{\O}6\text{mm}$ hole, 1.4m above the ground, the hole spacing refers to the hanging hole spacing on the hanger, and screw the expansion screw into the hole.
2. Hang the hanger on the wall and clip the nail into the hanging hole to ensure that it will not loose and fall.
3. The whole machine and accessories can be stored on the rack in turn.

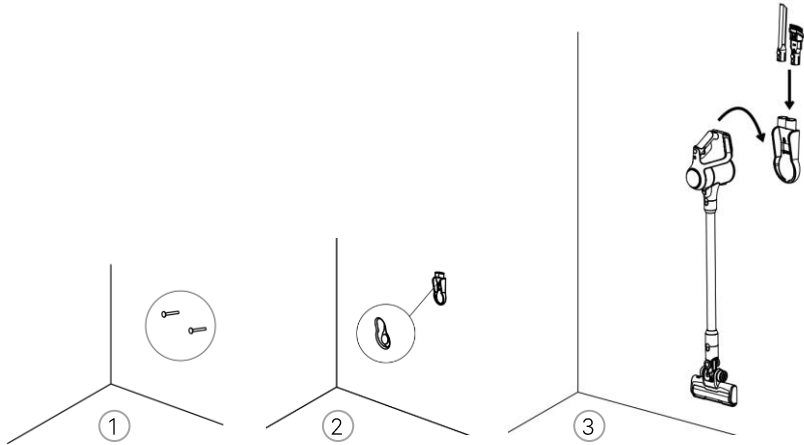


Operation

1. Charge Mode

Note: When using this product for the first time, please fully charge it. The charging time from 0 to 100% will be about 4 hours. This product provides two charging methods.

a) Mode 1: The host charge

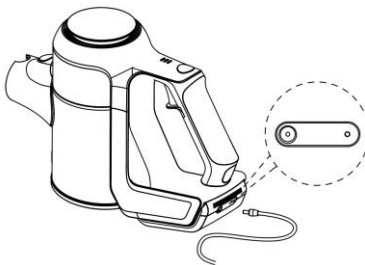


Battery pack charging port and indicator light.

Note:

- Charging status: battery pack indicator red light, host power indicator flashing.
- Charging end: battery pack indicator green is always on; host power indicator white is always on.


b) Mode 2: The battery pack charges separately

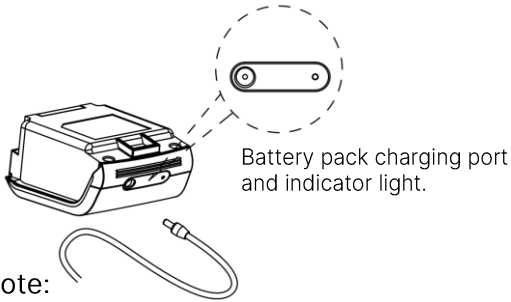

- Charging status: battery pack indicator light is always red.
- End of charging: battery pack indicator light is always green.

2. Use of the floor brush

Suitable for cleaning carpets, floors, etc.

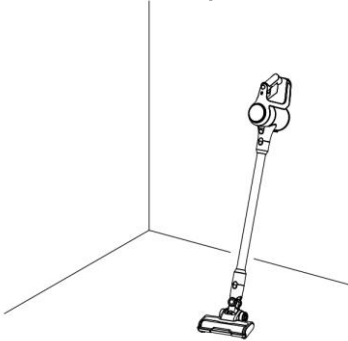


3. Use of attachments

a) long flat

Suitable for cleaning doors and windows grooves and crevices.

b) Combination of flat suction

Suitable for cleaning sofa, mattress, curtain, etc.

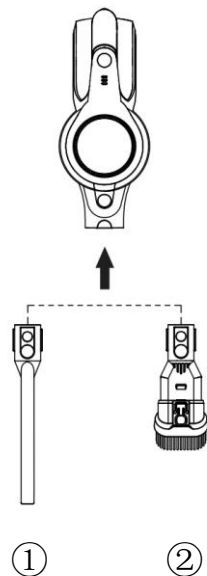

PART 4: MAINTENANCE

Host Maintenance

1. Be sure to use the original parts, otherwise you may not be able to enjoy the warranty service.
2. If the cyclone system and suction head are blocked and the machine noise becomes loud, please clean the cyclone system and suction head in time.
3. When you do not use the vacuum cleaner for a long time, please place the machine in a cool and dry place. Do not place the machine in direct sunlight or humid environment.
4. If you do not use the product for a long time, please unplug the power adapter and place it in a cool and dry place after full charge, and charge it at least once every 3 months to avoid over-discharge of the battery.


Clean the host

Clean the mainframe with a soft dry cloth and do not flush with water.

Pour out of the dust


Note: Before each cleaning, disconnect the power adapter and keep the vacuum cleaner off.

Once the dust reaches the MAX mark, please empty the dust cup in time. The dust dump button can be used to dump the dust with one key.

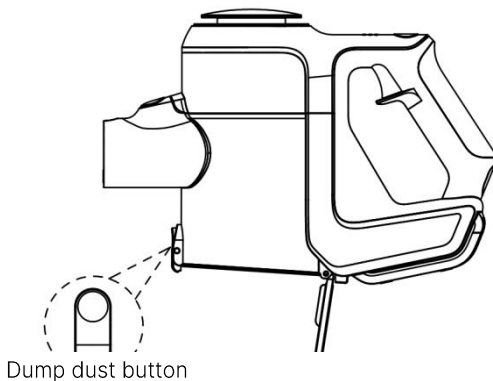


Cleaning cyclone system


1. Press the dust cup disassembly button and rotate the dust cup along the direction of the arrow to disassemble the dust cup.

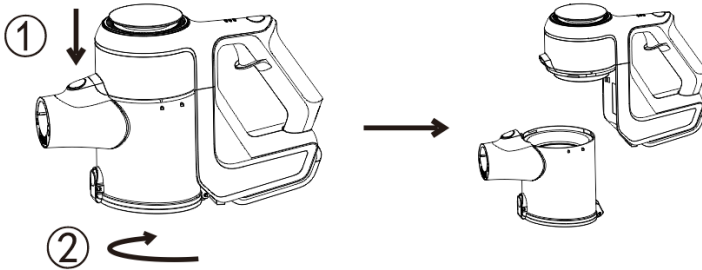

2. Remove the cyclone components as shown in the picture and clean the filter with a brush, no flushing with water.

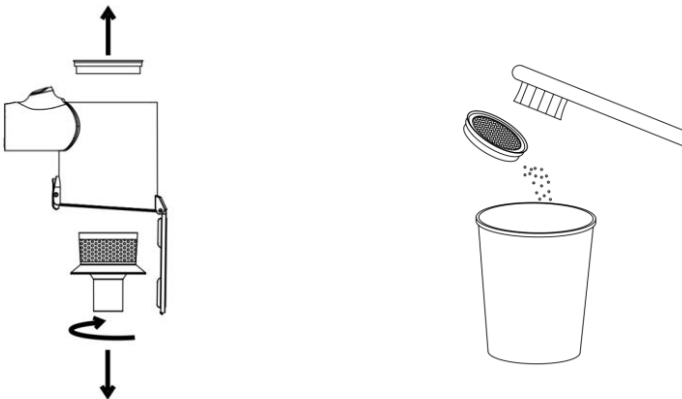

3. Clean the cyclone system regularly and dry it thoroughly before use.

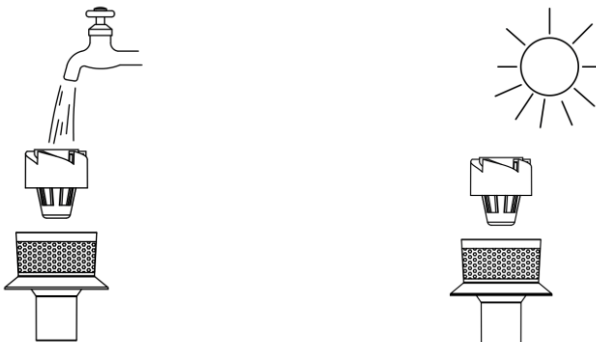

PART 5: TROUBLESHOOTING

Problem	Possible Cause	Recommended Actions
Suction reduced, increased noise, or abnormal loud	Dust cup full of dust or filter clogged	Clean dust cup and filter system
	Suction block	Clean the suction plug
	Floor brush blocked	Clean the floor brush blockage
Device not working, indicator light flashing	Low battery	Charge it before use
	Filter is blocked	Cleaning filters
	Ground brush is blocked	Check whether the roller is stuck and clean the roller
Charging is abnormal, and the power indicator flashes	Battery pack high temperature protection	Let it stand for 20 minutes before charging

PART 6: SPECIFICATIONS

Model	VC 5052 SAWH
Type of Product	Cordless Stick Vacuum Cleaner
Color	White-Gray
Dust Capacity	0.5 L
Motor Power	150 W
Battery Capacity	2000 mAh
Battery Voltage	21.6 V
Charging Time	3-4 hours
Brush Head	Floor Brush, Crevice Nozzle, and Bristle Brush
Dimension	145 x 340 x 750 mm

Specifications of this appliance may change without notice to improve the quality of the product. Pictures in this manual are schematic and may not match your product exactly. Values stated on the machine labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the appliance, values may vary.

MODENA