

Buku Petunjuk Penggunaan Built – In Microwave Oven

**Vicino Series
BV 6435
BV 3435**

DAFTAR ISI


Bagian 1 : Petunjuk Keselamatan	3
Bagian 2 : Nama – Nama Bagian	3
Panel Kontrol	4
Display	4
Bagian 3 : Pemasangan	5
Menyesuaikan Oven Pada Kitchen Set	5
Sambungan Kelistrikan	6
Bagian 4 : Cara Penggunaan	7
Bagian 5 : Perawatan	14
Part 6 : Penyelesaian Masalah	15
Part 7 : Tindakan Pencegahan	15
Part 8 : Spesifikasi	16

Buku panduan ini menjelaskan semua yang perlu diketahui tentang produk baru Anda. Silahkan hubungi Customer Care untuk bantuan lebih lanjut lewat situs resmi www.modena.com.

BAGIAN 1 : PETUNJUK KESELAMATAN

- Silakan menggunakan soket dengan arus di atas 25A. Pemanasan harus dijamin. Jangan gunakan soket steker listrik yang longgar atau buruk, atau dengan mudah menyebabkan sengatan listrik, korsleting, dan kebakaran; Jika peralatan berbagi satu soket dengan peralatan listrik lainnya, kebakaran dapat terjadi karena pemanasan yang tidak normal.
- Saat mencabut soket, pegang ujung steker dengan tangan untuk menariknya keluar; Jangan mencabut kabel listrik dengan tangan yang memegang kabel, karena sengatan listrik, korsleting, kebakaran, dan bahaya lainnya dapat terjadi.
- Hanya teknisi perbaikan profesional yang dapat membongkar, memperbaiki, dan mengubah peralatan.
- Jika peralatan diam dalam waktu lama, cabut steker listrik atau matikan supply listrik barang.
- Selama penggunaan alat menjadi panas. Perhatian harus diberikan untuk menghindari menyentuh elemen pemanas di dalam oven.
- PERINGATAN: Komponen yang dapat diakses dapat menjadi panas selama penggunaan. Anak-anak kecil harus dijauhkan.
- Jangan menggunakan pembersih abrasif yang kasar atau pengikis logam tajam untuk membersihkan kaca pintu oven, karena dapat menggores permukaan, yang dapat mengakibatkan kaca pecah.
- Alat ini tidak dimaksudkan untuk digunakan oleh orang (termasuk anak-anak) dengan keterbatasan fisik, sensorik atau mental, atau kurang pengalaman dan pengetahuan, kecuali mereka telah diberi pengawasan atau instruksi tentang penggunaan alat oleh orang yang bertanggung jawab keselamatan. Anak-anak harus diawasi untuk memastikan mereka tidak bermain-main dengan alat ini.
- PERINGATAN: Peranti dan bagian yang mudah disentuh menjadi panas selama penggunaan. Perhatian harus dilakukan untuk menghindari menyentuh elemen pemanas. Anak-anak yang berusia kurang dari 8 tahun harus dijauhkan kecuali diawasi terus menerus.
- Jika kabel suplai rusak, harus diganti oleh produsen, agen servis atau orang yang mempunyai keahlian sejenis untuk menghindari bahaya.

BAGIAN 2 : NAMA – NAMA BAGIAN

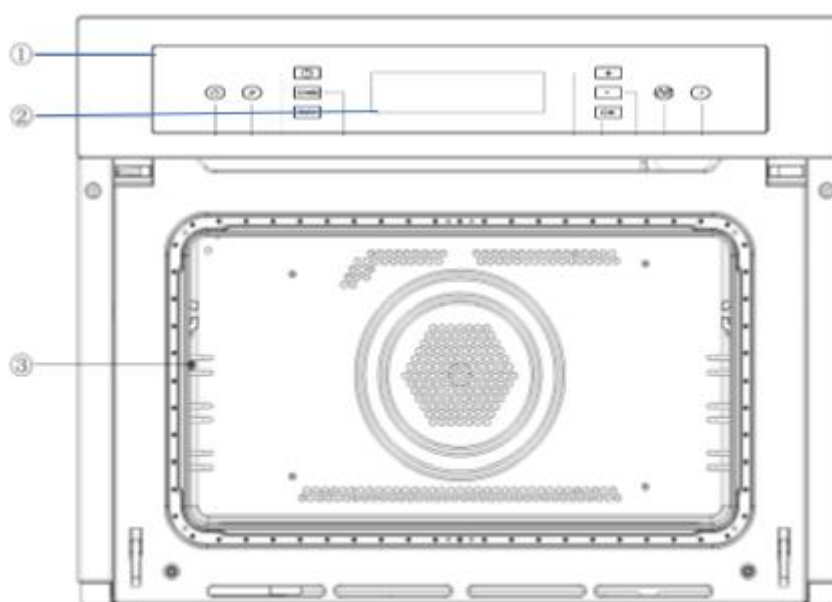


Keterangan:

1 Layar display

2 Panel Kontrol

3 Penyangga rak


Panel Kontrol

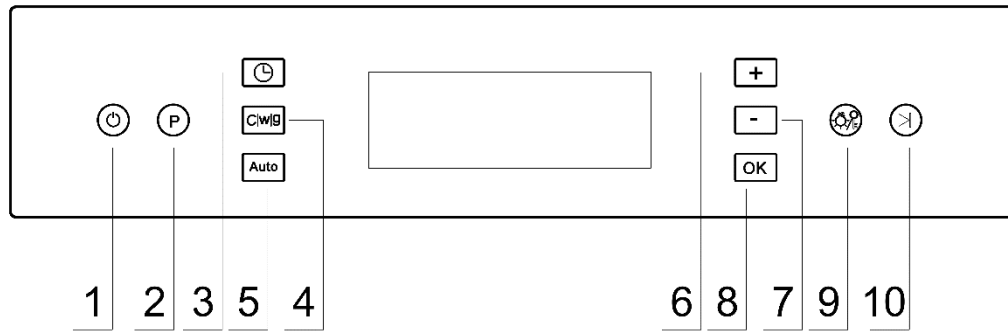

Keterangan:

- | | | | |
|---|--|----|-------------------------|
| 1 | Tombol Daya | 6 | Tombol Atas |
| 2 | Tombol Program | 7 | Tombol Bawah |
| 3 | Timer | 8 | Tombol Ok |
| 4 | Suhu (°C) / Daya (Watts) / berat (grams) | 9 | Lampu / Tombol Pengunci |
| 5 | Memasak Otomatis | 10 | Start / Pasue |

Display

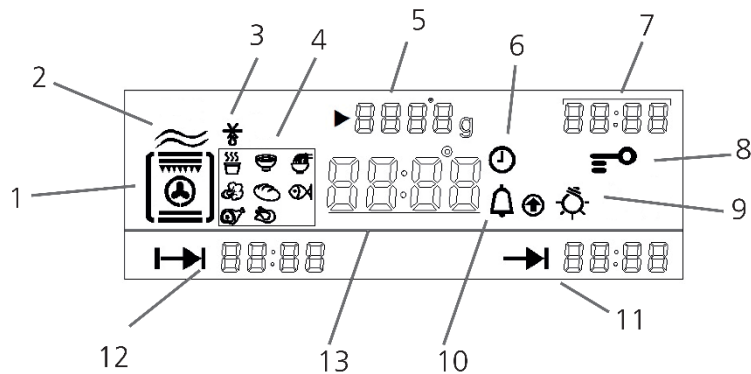

Keterangan

1. Program / Fungsi
2. Microwave
3. *Defrost* / Pencairan
4. Memasak Otomatis
5. Suhu (°C) / Daya (Watts) / berat (grams)
6. Timer
7. Waktu
8. Tombol Pengunci
9. Lampu
10. Alarm / Peningat Waktu
11. Waktu berakhir
12. Waktu Proses
13. Suhu / Tampilan waktu

BAGIAN 3 : PEMASANGAN


Cabutlah steker oven dari stop kontak sebelum melakukan pemasangan atau perawatan

Pemasangan hendaknya hanya dilakukan sesuai petunjuk oleh teknisi yang berkualifikasi profesional.

Modena tidak dapat dimintai pertanggungjawaban atas kerusakan apapun pada orang, hewan, atau barang karena pemasangan yang tidak benar.

Menyesuaikan Oven Pada Kitchen Set

- Kitchen set yang akan dipasang oven harus tahan terhadap panas.
- Gunakan kitchen set yang sesuai untuk memastikan bahwa unit dapat bekerja dengan baik. Bingkai atau panel yang berdekatan dengan oven harus terbuat dari bahan yang tahan panas.
- Kabinet dengan eksterior berlapis pernis harus dirakit dengan perekat yang dapat menahan suhu hingga 100°C.
- Periksa apakah ukuran lubang pada kitchen set untuk diletakkan oven sudah sesuai dengan ukuran yang tertera pada gambar di bawah.

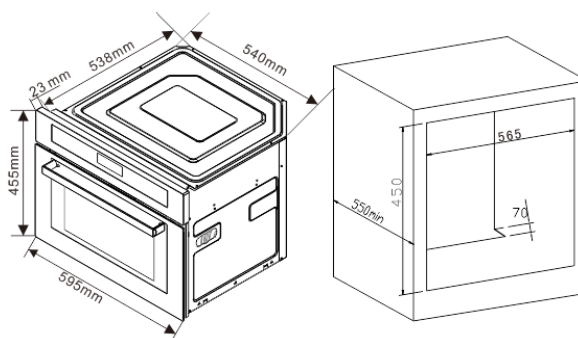

Pemasangan Oven

Pasanglah oven pada tempatnya (di dalam lemari dapur atau di atas alat lain) dengan memasang sekrup pada empat lubang yang terdapat pada rangka oven saat pintu oven terbuka.

Untuk mendapatkan sirkulasi udara paling efisien, oven harus dipasang sesuai jarak yang ditunjukkan dalam gambar 1-2.


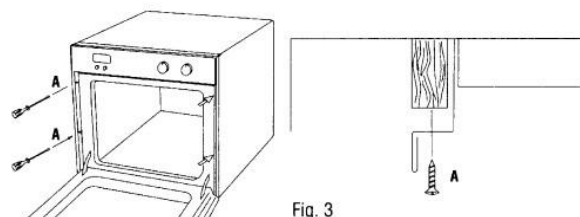


Fig. 3

Panel belakang kabinet harus dilepaskan agar udara dapat bersirkulasi bebas. Panel tempat oven dipasang harus memiliki jarak bebas sekurang-kurangnya 7 cm di belakang oven.

Untuk sirkulasi udara yang paling efisien, oven harus dipasang sesuai dengan dimensi yang ditunjukkan pada gambar 1-2. Panel belakang kabinet harus dilepas sehingga udara dapat bersirkulasi dengan bebas. Panel yang dipasang oven harus memiliki celah minimal 70 mm di bagian belakangnya.

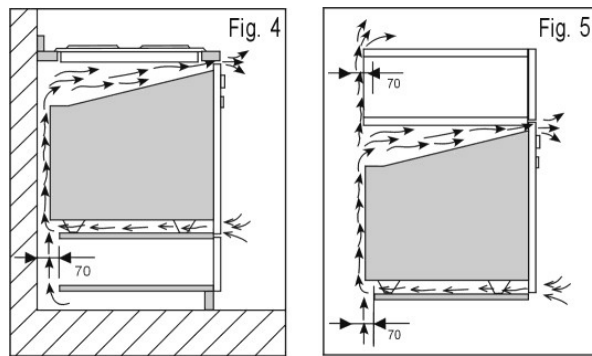

CATATAN :

Bila oven akan dipasangkan dengan tungku lain, ikutilah petunjuk dalam buku petunjuk tungku lain tersebut.

- Oven akan menjadi panas saat digunakan. Hati-hatilah untuk menghindari menyentuh elemen-elemen pemanas di dalam oven.
- Komponen-komponen yang bisa tersentuh manusia dapat menjadi panas selama penggunaan. Anak-anak kecil harus dijauhkan dari oven.
- Jangan menggunakan zat pembersih yang kasar atau alat pengikis yang tajam untuk membersihkan kaca pintu oven karena dapat menggores kaca, yang dapat menyebabkan kaca pecah.

Untuk oven tanam, jenis kabinet harus sesuai untuk penggunaan oven.

Panel-panel furnitur di sekitar oven harus tahan panas. Terutama bila furnitur di sekitar oven terbuat dari kayu lapis, lem kayunya harus tahan terhadap temperatur 120°C. Bahan plastik atau lem yang tidak tahan terhadap temperatur ini akan berubah bentuk atau lepas.

Untuk mematuhi peraturan keselamatan, setelah oven dipasang, kontak dengan komponen-komponen yang beraliran listrik tidak boleh terjadi.

Semua komponen yang memiliki fungsi perlindungan harus dipasang sedemikian rupa sehingga tidak dapat dilepaskan tanpa menggunakan alat kerja.

Sambungan Kelistrikan

Oven ini harus dipasang dengan benar untuk menjamin keamanan peralatan listrik. Selama tindakan pemasangan dan perawatan, steker oven harus dicabut dari stopkontak; sekering harus dimatikan atau dilepaskan.

Sambungan kelistrikan harus dituntaskan sebelum oven dipasang pada kabinet, Pastikan:

- Saluran listrik memiliki voltase yang cukup,
- kabel-kabel listrik berada dalam kondisi baik,
- diameter kabel listrik sesuai dengan persyaratan pemasangan.

Kabel listrik untuk oven harus menggunakan kabel (yang memenuhi standar) dengan 3 kawat konduktor berpenampang 1,5 mm² (1 arus + 1 netral + arde) yang harus disambungkan ke jaringan listrik fasa tunggal 220-240V~ melalui suatu stopkontak berstandar CEI 60083 dengan titik 1 arus + 1 netral + arde atau perangkat yang memutuskan semua kutub sesuai aturan pemasangan listrik.

CATATAN :

Kawat arde / tanah (hijau-kuning) terhubung ke terminal oven dan harus disambungkan ke terminal pentanahan/arde jaringan listrik.

Setelah pemasangan selesai, sambungan kelistrikan oven ke jaringan listrik harus bisa diputuskan. Pemutusan tersebut harus dapat dilakukan dengan menggunakan steker yang mudah dijangkau atau menggunakan saklar pada kawat jaringan listrik tetap tempat oven dipasang yang sesuai aturan pemasangan. Sekring pada jaringan listrik tempat oven dipasang harus berukuran 16 ampere. Bila kabel listrik rusak, kabel hanya boleh diganti oleh Modena atau agen servisnya atau teknisi yang berkualifikasi serupa untuk menghindari bahaya.

MODENA tidak bertanggung jawab atas kejadian apapun yang disebabkan oleh pembumian yang tidak dipasang, tidak berfungsi baik, atau tidak benar. Bila diperlukan perubahan pada pemasangan kelistrikan di rumah anda untuk pemasangan oven, hubungilah teknisi listrik profesional.


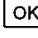
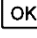
Bila terjadi suatu masalah pada oven, cabut steker oven dari stopkontak atau lepaskan sekering jaringan listrik pada sektor jaringan tempat oven terpasang.




BAGIAN 4 : CARA PENGGUNAAN


Cara Penggunaan


Tekan tombol  untuk menyalakan oven. Saat dihidupkan, layar akan menyala dan waktu akan ditampilkan.

Program / Fungsi


Untuk memilih fungsi, tekan tombol  untuk beralih di antara fungsi dan tekan  setelah Anda mencapai fungsi yang diinginkan. Tekan tombol  untuk masuk ke mode suhu (°C), daya (W) atau berat (g) tergantung pada fungsi apa yang telah dipilih.

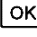Untuk mengatur suhu, daya atau berat, gunakan tombol  /  kemudian tekan  untuk konfirmasi.

Setelah dikonfirmasi, tekan tombol  untuk mulai memasak. Timer utama akan menunjukkan suhu sebenarnya, dengan suhu yang disetel di atas ini.

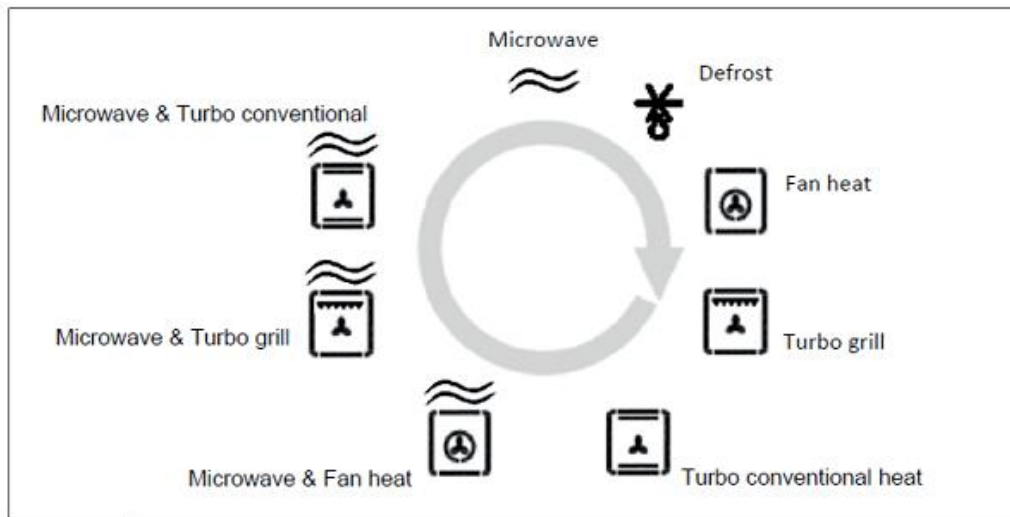




Fungsi Lampu

Tekan tombol  sekali untuk menyalakan & mematikan lampu oven microwave internal. Lampu akan mati secara otomatis setelah 3 menit tidak ada operasi.





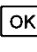
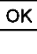

Saat lampu diaktifkan, symbol  akan ditampilkan di layar.

Tombol Pengunci


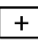

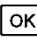
Tahan tombol  selama 2-3 detik untuk mengaktifkan kunci anak. Untuk menonaktifkan, tekan dan tahan tombol  lagi selama 2-3 detik.

Saat Kunci Anak diaktifkan, symbol  akan ditampilkan di layar



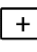

Pengaturan Alarm



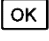

Untuk menyetel Alarm / pengingat menit, tekan tombol  sampai simbol  mulai berkedip. Gunakan tombol  /  untuk mengatur waktu, lalu tekan  untuk konfirmasi. Jika Anda ingin membatalkan alarm, pilih waktu alarm kembali ke '0,00' dan tekan  untuk konfirmasi. Saat waktunya habis, alarm akan berbunyi selama 90 detik, dan symbol  akan mulai berkedip. Untuk menghentikan alarm, tekan tombol apa saja.

Pengaturan Waktu

Untuk menyetel waktu, nyalakan oven, lalu tekan dan tahan tombol  selama 3 detik hingga waktu mulai berkedip. Sesuaikan waktu dengan menggunakan tombol  /  lalu tekan  untuk konfirmasi. Saat oven pertama kali dihidupkan atau dihidupkan ulang, waktu harus diatur sebelum menggunakan oven.




Durasi Memasak (0-10 jam)

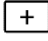Setelah fungsi dan suhu dipilih, tekan tombol  selama 3 detik hingga waktu mulai berkedip. Sesuaikan waktu dengan menggunakan tombol  /  lalu tekan  untuk konfirmasi.




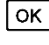




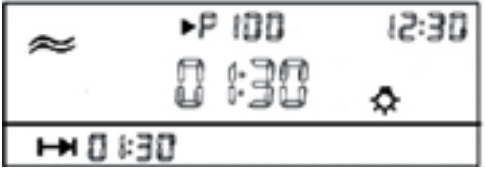
Setelah waktunya habis, alarm akan berbunyi dan oven akan mati. Tekan salah satu tombol untuk mematikan alarm  /  ,  dan  .

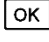
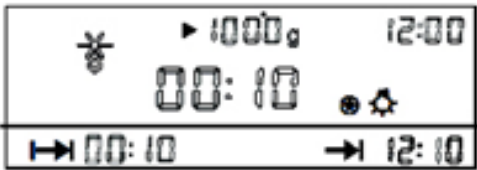

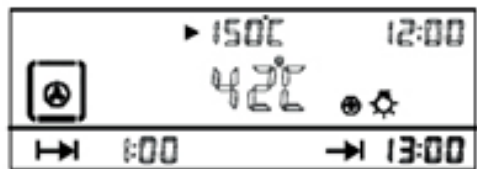

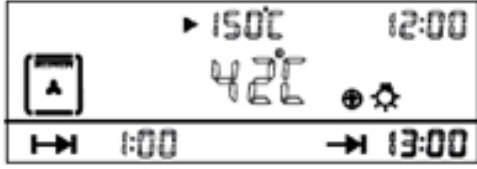

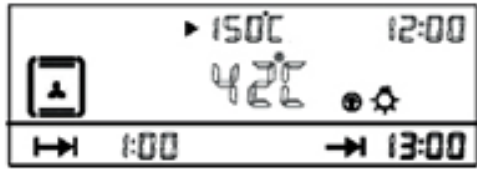
Untuk membatalkan Durasi memasak, setel waktu memasak ke '0,00' dan konfirmasi.


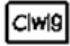
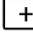
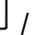
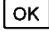

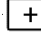
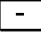













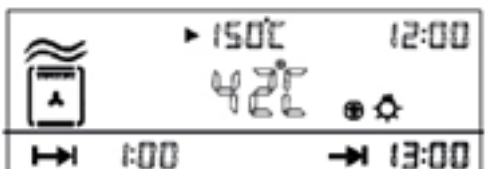
Akhir Waktu Memasak

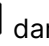
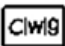
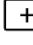
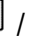
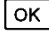
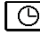
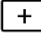
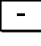



Setelah Durasi waktu memasak disetel, tekan  dua kali dan waktu Selesai memasak  akan mulai berkedip. Sesuaikan waktu dengan waktu Anda ingin berhenti memasak dan tekan  untuk konfirmasi.

Oven Anda kemudian akan menentukan kapan harus dihidupkan, sehingga memasak untuk durasi waktu yang diperlukan, dan selesai pada waktu akhir yang ditentukan. Misalnya. Durasi waktu diatur pada 30 menit, dan waktu berakhir diatur ke 18.15, oven akan menyala secara otomatis pada pukul 17.45 dan memasak selama 30 menit pada fungsi dan suhu yang diatur (waktu mulai = Waktu berakhir-waktu durasi).

Fungsi	Keterangan	Tampilan layar
	<p>Microwave – Daya default P100 (Tingkatan Daya P10 – P100)</p> <p>Untuk menyesuaikan Daya, Tekan  /  hingga power yang diinginkan sesuai dan kemudian tekan </p> <p>Waktu standar yaitu 30 detik. Untuk menyesuaikan waktu tekan tombol  kemudian tekan  /  dan  untuk konfirmasi.</p> <p>Kenaikan waktu setiap kelipatan 30 detik (maksimal 60 menit)</p> <p>Catatan Waktu Durasi saat menggunakan fungsi microwave akan menampilkan 'menit: detik', di semua fungsi lainnya akan menunjukkan 'jam: menit'.</p> <p>Terakhir tekan untuk memulai program.</p>	

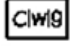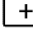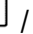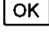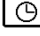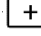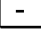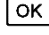



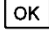


	<p>Pencairan / Defrost - Berat default 1000g (kisaran berat 100 - 2000 g)</p> <p>Untuk mengatur berat tekan tombol Clw/g diikuti dengan + / - dan OK untuk konfirmasi.</p> <p>Terakhir tekan ▶ untuk memulai program. Waktu default akan disesuaikan dengan berat yang disetel (Lihat 'Tabel waktu pencairan' untuk info lebih lanjut)</p>	
	<p>Kipas Pemanas - Suhu default 200 ° C</p> <p>Untuk mengatur suhu tekan Clw/g diikuti dengan ▲ / ▼.</p> <p>Tekan OK untuk konfirmasi.</p> <p>Waktu default adalah 1,00 jam. Untuk mengatur waktu, tekan tombol 🕒 diikuti dengan + , - , dan OK untuk konfirmasi.</p> <p>Terakhir tekan ▶ untuk memulai program</p>	
	<p>Turbo Grill - Suhu default 200 ° C (Kisaran suhu 50-220 ° C)</p> <p>Untuk mengatur suhu tekan tombol diikuti dengan ▲ / ▼ dan OK untuk konfirmasi.</p> <p>Waktu default adalah 1,00 jam. Untuk mengatur waktu, tekan tombol diikuti dengan + , - , dan OK untuk konfirmasi.</p> <p>Terakhir tekan ▶ untuk memulai program</p>	
	<p>Turbo Konvensional - Suhu default 200 ° C (Kisaran suhu 50-220 ° C)</p> <p>Untuk mengatur suhu tekan tombol Clw/g diikuti dengan + / - dan OK untuk konfirmasi.</p> <p>Waktu default adalah 1,00 jam. Untuk mengatur waktu, tekan tombol 🕒 diikuti dengan + , - , dan OK untuk konfirmasi.</p> <p>Terakhir tekan ▶ untuk memulai program</p>	

	<p>Microwave & Fan Heat - Microwave Daya default P50 (kisaran daya P10 - P50)</p> <p>Suhu standar panas kipas 200 ° C (Kisaran suhu 50 - 220 ° C)</p> <p>Tekan  sekali untuk masuk ke mode daya microwave, dan sekali lagi untuk masuk ke mode suhu panas kipas. Keduanya kemudian dapat disesuaikan menggunakan  /  dan  untuk mengonfirmasi.</p> <p>Waktu default adalah 1,00 jam. Untuk mengatur waktu, tekan tombol  diikuti dengan  ,  dan  untuk konfirmasi</p> <p>Terakhir tekan  untuk memulai program.</p>	
	<p>Microwave & Turbo Grill - Microwave Daya default P50 (kisaran daya P10 - P50)</p> <p>Suhu standar panas kipas 200 ° C (Kisaran suhu 50 - 220 ° C)</p> <p>Tekan  sekali untuk masuk ke mode daya microwave, dan sekali lagi untuk masuk ke mode suhu panas kipas. Keduanya kemudian dapat disesuaikan menggunakan  /  dan  untuk mengonfirmasi.</p> <p>Waktu default adalah 1,00 jam. Untuk mengatur waktu, tekan tombol  diikuti dengan  ,  dan  untuk konfirmasi</p> <p>Terakhir tekan  untuk memulai program.</p>	

	<p>Microwave & Turbo convectional heat - Microwave Daya default P50 (kisaran daya P10 - P50)</p> <p>Suhu standar panas kipas 200 ° C (Kisaran suhu 50 - 220 ° C)</p> <p>Tekan sekali  untuk masuk ke mode daya microwave, dan sekali lagi untuk masuk ke mode suhu panas kipas. Keduanya kemudian dapat disesuaikan menggunakan  /  dan  untuk mengonfirmasi.</p> <p>Waktu default adalah 1,00 jam. Untuk mengatur waktu, tekan tombol  diikuti dengan ,  dan  untuk konfirmasi</p> <p>Terakhir tekan  untuk memulai program.</p>	
---	--	--



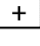





Memasak Otomatis

Contoh :

	<p>Susu (Program Otomatis)</p> <p>Tekan tombol program otomatis sampai simbol susu ditampilkan.</p> <p>Tekan  untuk masuk ke pemilihan Bobot. gunakan  /  untuk mengatur berat dan  untuk konfirmasi.</p> <p>Waktu default akan disesuaikan dengan berat yang dipilih</p> <p>Terakhir tekan  untuk memulai program.</p>	
---	--	--

Tabel Waktu Pencairan / Defrost

Berat maksimal untuk pencairan yaitu 2000g. Waktu pencairan akan disesuaikan berdasarkan perbedaan berat yang di pilih.

Simbol	Berat Default	Berat Alternatif (g)	Fungsi	Durasi (Menit)
 Milk	250 g	250	Microwave	2
		500	Microwave	4
 Soup	500g	500	Microwave	19
		800	Microwave	22
 Noodles	300g	300	Microwave	5
		600	Microwave	8
 Vegetable	200g	100	Microwave	2
		200	Microwave	4
		300	Microwave	5
		400	Microwave	6
		500	Microwave	7
		600	Microwave	8
 Bread	200g	100	Microwave	1
		200	Microwave	2
		300	Microwave	3
 Fish	500g	100	Microwave	3
		200	Microwave	5
		300	Microwave	6
		400	Microwave	7
		500	Microwave	8
		600	Microwave	9
		700	Microwave	10
		800	Microwave	11
		900	Microwave	12
		1000	Microwave	13
 Meat	500g	200	Microwave	7
		300	Microwave	8
		400	Microwave	10
		500	Microwave	12
		600	Microwave	14
		800	Microwave	16
		1000	Microwave	19
 Chicken	1000g	200	Microwave + Grill	15
		400	Microwave + Grill	20
		600	Microwave + Grill	25
		800	Microwave + Grill	30

		1000	Microwave + Grill	32
		1200	Microwave + Grill	35
		1400	Microwave + Grill	40
		1600	Microwave + Grill	46
		1800	Microwave + Grill	52
		2000	Microwave + Grill	56

BAGIAN 5 : PERAWATAN

- Sebelum membersihkan oven, tungguhlah sampai dengan suhu pada oven dingin.
- Putuskan sumber listrik.
- Jangan gunakan penggosok, deterjen yang bersifat abrasif, obat pemutih atau zat asam untuk membersihkan oven.

Membersihkan Oven

- Bila Anda selesai menggunakan oven, biarkan pintu oven terbuka untuk beberapa saat supaya oven dapat lekas dingin.
- Bersihkan bagian karet dan *stainless steel*
- Bagian dalam oven idealnya dibersihkan setiap kali selesai digunakan.
- Bersihkan oven dalam keadaan hangat (tidak panas) supaya tetesan/tumpahan makanan pada permukaan oven dapat dengan mudah dibers
- Bagian yang dilapisi dengan enamel atau krom dengan menggunakan spon lembut dan air sabun hangat atau deterjen cair yang tidak bersifat abrasif. Gunakan produk khusus untuk menghilangkan noda membandel. Setelah membersihkan, keringkan unit sampai benar-benar kering.
- Seluruh aksesoris – dengan pengecualian sliding rak – bisa setiap hari dicuci layaknya peralatan memasak dan juga aman jika dicuci menggunakan mesin pencuci piring.
- Jangan menggunakan pembersih jenis steam atau pembersih bertekanan tinggi pada unit.

Membersihkan Pintu Oven

Untuk mempermudah dalam membersihkan oven, pintu oven dapat dilepas dengan cara:

Bersihkan bagian kaca menggunakan spon dan produk pembersih yang tidak bersifat abrasif, kemudian keringkan dengan kain lembut. Jangan menggunakan bahan yang bersifat abrasif atau memiliki permukaan tajam karena dapat menggores permukaan dan mengakibatkan kaca retak.

Memeriksa bagian segel

Periksa segel sekitar pintu secara teratur. Jika segel rusak, hubungi Pusat Layanan MODENA untuk perbaikan atau penggantian. Dianjurkan untuk tidak menggunakan oven selama segel belum diganti atau diperbaiki.

BAGIAN 6 : PENYELESAIAN MASALAH

Lakukan pengecekan terhadap hal-hal di bawah ini sebelum menghubungi Pusat Layanan kami, bila terjadi gangguan pada oven Anda:

MASALAH	KEMUNGKINAN PENYEBAB	TINDAKAN YANG DIREKOMENDASIKAN
Lapisan bagian atas terlalu gelap dan bagian bawah terlalu pucat	Tidak cukup panas dari bagian bawah	<ul style="list-style-type: none"> • Gunakan fungsi konveksi natural • Gunakan loyang dengan tingkat kedalaman lebih dalam • Kecilkan suhu • Letakkan kue di rak bagian bawah
Bagian bawah terlalu gelap dan lapisan bagian atas terlalu pucat	Panas berlebihan dari bagian bawah	<ul style="list-style-type: none"> • Gunakan fungsi konveksi natural • Gunakan loyang dengan tingkat kedalaman rendah. • Kecilkan suhu • Letakkan kue di rak bagian atas
Bagian luar terlalu matang dan bagian dalam belum matang	Suhu terlalu tinggi	<ul style="list-style-type: none"> • Kecilkan suhu dan tingkatkan waktu memasak
Bagian luar terlalu kering walaupun warna dari masakan sudah benar	Suhu terlalu rendah	<ul style="list-style-type: none"> • Tingkatkan suhu dan kurangi waktu memasak

BAGIAN 7 : TINDAKAN PENCEGAHAN

Saran dan tindakan pencegahan

Unit ini didesain dan dibuat dengan memenuhi standar keselamatan internasional. Peringatan dan petunjuk dibawah ini dibuat untuk alasan keselamatan dan harus dibaca dan diikuti secara seksama.

Petunjuk Keselamatan Umum

- Unit dirancang untuk penggunaan rumah tangga dan digunakan didalam rumah dan bukan ditujukan untuk penggunaan komersil atau industri.
- Unit tidak boleh dipasang di area terbuka. Sangat berbahaya membiarkan unit terpapar hujan dan topan.
- Ketika memindahkan dan memasang unit, selalu gunakan pegangan yang tersedia dibagian samping oven.
- Jangan menyentuh unit dengan kondisi kaki telanjang atau basah atau tangan dan kaki yang basah.
- Unit harus digunakan hanya oleh orang dewasa untuk menyiapkan hidangan sesuai dengan instruksi yang ada pada buku petunjuk.
- Jangan menyentuh elemen pemanas atau bagian tertentu dari pintu oven pada saat unit digunakan, karena beberapa bagian menjadi sangat panas. Jauhkan anak-anak dari oven dan jangan menyentuh bagian yang panas secara langsung.
- Pastikan kabel listrik dari peralatan elektronik lainnya tidak bersentuhan dengan bagian-bagian panas oven.
- Penggunaan terbuka untuk ventilasi dan penyebaran panas harus tidak terhalang.
- Selalu pegang handle oven dibagian tengah, bagian ujung handle bisa saja panas.
- Selalu gunakan sarung tangan ketika menempatkan atau mengeluarkan peralatan makan ke atau dari dalam oven.
- Jangan menggunakan aluminum foil untuk melapisi bagian bawah oven.
- Jangan menaruh bahan-bahan yang mudah terbakar didalam oven, jika unit tidak sengaja diaktifkan, bahan-bahan tersebut dapat terbakar.
- Selalu pastikan knop pada posisi "●"/"○" ketika unit tidak digunakan.
- Ketika melepaskan kabel listrik, selalu menariknya dari kepala kabel, jangan menarik kabelnya.
- Selalu lepaskan kabel listrik dari sumbernya ketika akan melakukan perawatan atau perbaikan terhadap unit.
- Jika terjadi kerusakan pada unit, bagaimanapun juga jangan mencoba untuk memperbaikinya sendiri. Perbaikan yang dilakukan oleh orang yang tidak berpengalaman kemungkinan dapat menyebabkan

kecelakaan atau kerusakan yang lebih parah pada unit. Hubungi sentra servis resmi MODENA untuk perbaikan.

- Jangan meletakkan atau menyenderkan benda berat pada pintu oven.
- Jangan membiarkan anak-anak bermain dengan unit.
- Unit tidak untuk digunakan oleh orang (termasuk anak-anak) dengan kekurangan kemampuan fisik, sensorik, atau mental; atau kekurangan pengalaman dan pengetahuan mengenai produk ini, kecuali kepada mereka telah diberikan pengawasan atau petunjuk mengenai penggunaan alat oleh orang yang bertanggung jawab atas keselamatan mereka.
- Selalu matikan oven sebelum mengeluarkan rak dan pelat oven.
- Selama proses memasak, lemak atau minyak harus diperlakukan secara hati-hati karena bahan ini dapat menimbulkan kebakaran jika mencapai suhu tertentu.
- Selalu ingat bahwa bagian – bagian oven dan benda lain yang ada disekitarnya akan terasa panas untuk jangka waktu yang cukup lama (kurang lebih 30 menit) setelah Anda mematikan oven.
- Lakukan service secara rutin pada oven Anda setiap 3 (tiga) bulan sekali, karena jika terdapat kelainan pada oven Anda, dapat segera diketahui dan diperbaiki.

BAGIAN 8 : SPESIFIKASI

Model	BV 3435	BV 6435
Jenis oven	combi oven (microwave dengan oven konveksi)	combi oven (microwave dengan oven konveksi)
Cara pemasangan	Tanam	Tanam
Program memasak	Universal, automatic, microwave	Universal, automatic, microwave
Warna	Black + stainless	Black
Kapasitas oven (liter)	40	40
Jumlah tingkatan power	10	10
Oven	Elektrik	Elektrik
Tegangan listrik	220 – 240 v / 50 hz	220 – 240 v / 50 hz
Rata-rata daya pemanas atas/grill	2550 w	2550 w
Rata-rata keluaran daya microwave	1000 w	1000 w
Rata-rata daya kombinasi	2550 w	2550 w
Rata-rata masukan daya microwave	1500 w	1500 w
Dimensi produk (p x l x t) mm	595 x 610 x 455	595 x 610 x 455
Dimensi lubang meja (p x l x t) mm	565 x 550 x 450	565 x 550 x 450
Berat produk	36 kg	36 kg

Untuk meningkatkan kualitas produk, desain dan spesifikasi diatas dapat berubah setiap saat tanpa pemberitahuan. Gambar pada buku ini bersifat skematis dan bisa saja tidak tepat sama dengan produk aktual. Nilai yang tercantum pada label atau dalam dokumentasi yang menyertainya diperoleh di laboratorium sesuai dengan standar yang relevan. Nilai-nilai dapat bervariasi tergantung pada kondisi operasional dan lingkungan dari unit.

MODENA

TABLE OF CONTENT


Part 1 : Safety Warnings	19
Part 2 : Name of Parts	19
Control Panel	20
Display	20
Part 3 : Installation	20
Installing The Oven Into Kitchen Set	20
Electrical Connections	22
Part 4 : How to Use	28
Part 5 : Maintenance	29
Part 6 : Troubleshooting	30
Part 7 : Precaution Action	31
Part 8 : Specification	32

This guide book explains everything you need to know about your new product. Please contact our Customer Care should you need further assistance through www.modena.com

PART 1 : SAFETY WARNINGS

- Please independently use sockets with rated current above 25A. Reliable grounding must be guaranteed. Please do not use loose or poor contact power sockets, or it easily leads to electric shock, short circuit and fire; if the equipment share one socket with other electric appliances, fire may be caused for abnormal heating.
- When unplugging socket, hold the plug end with a hand to pull it out; do not unplug with the hand holding power cord, otherwise electric shock, short circuit, fire and other dangers will be caused.
- Only professional repair technicians can disassemble, repair and transform the equipment.
- If the equipment is idle for a long time, please unplug the power plug or turn off the power supply of the product.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

PART 2 : NAME OF PARTS

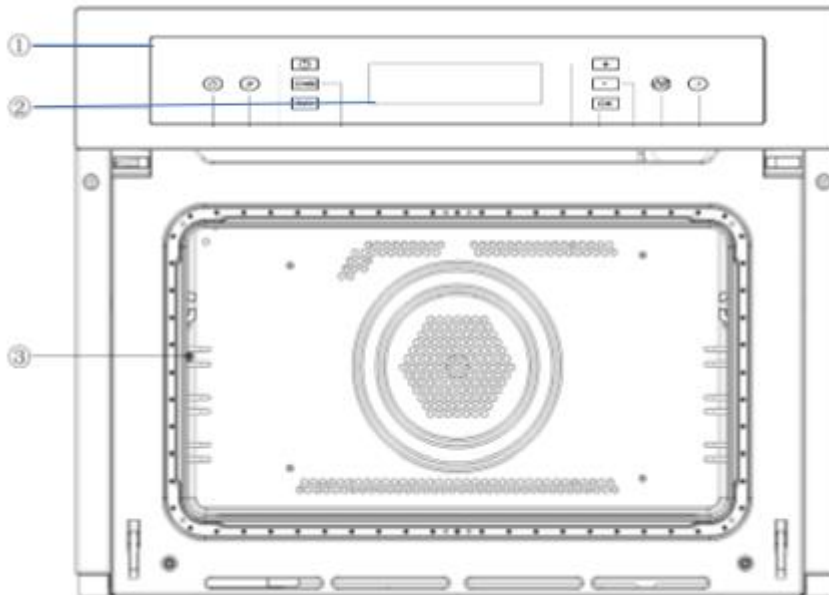


Information:

1 Display screen

2 Control Panel

3 Rack stand


Control Panel

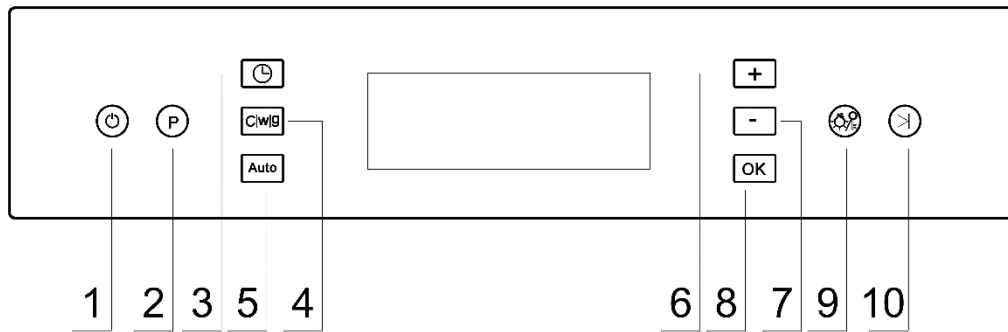

Information:

- | | | | |
|---|--|----|--------------------|
| 1 | Power Button | 6 | Up |
| 2 | Program Button | 7 | Down |
| 3 | Timer | 8 | Select |
| 4 | Temperature (°C) / Power (Watts) / Weight (grams) | 9 | Light / Child Lock |
| 5 | Auto Cooking | 10 | Start / Pause |

Display

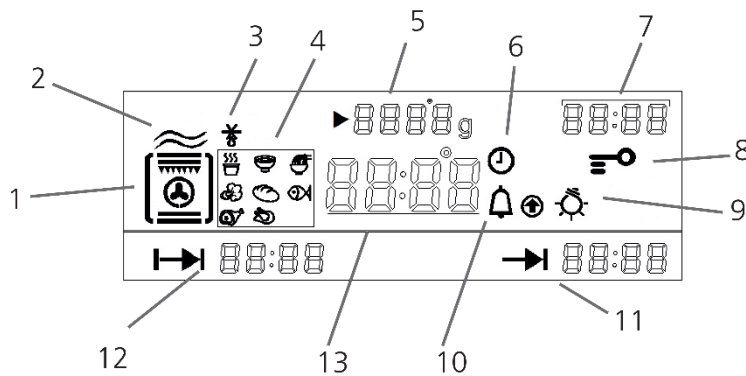

Information:

- | | | | |
|---|--|----|---------------|
| 1 | Program / Function | 8 | Child Lock |
| 2 | Microwave | 9 | Light |
| 3 | Defrost | 10 | Alarm |
| 4 | Auto Cooking | 11 | End time |
| 5 | Temperature / Power / Weight (grams) | 12 | Duration Time |
| 6 | Timer | 13 | Temperature |
| 7 | Time | | |

PART 3 : INSTALLATION

pull the plug out of the power socket before installation or maintenance process.


Installation can only be done according to the guide by a certified professional technician.

MODENA disclaims any responsibility on any human, animal, or property damage due to improper installation.


Installing The Oven Into Kitchen Set

- The kitchen set where the oven will be placed should be heat resistant.
- Use the appropriate kitchen set to ensure that the unit can work well. Frame or panels in contact to the oven must be made of heat-resistant material.
- Cabinet with lacquer-coated exterior must be assembled with adhesives that can with stand temperatures up to 100°C.


- Check if the size of the space in the kitchen set to put the oven is set according to the size shown in the figure below.

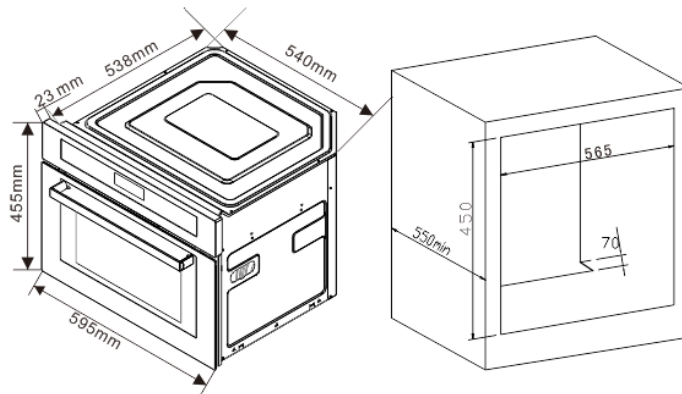

- Put / insert oven into the kitchen set hole by installing a screw type A into the four holes in the oven. Screws can be found on the side of the oven frame.
- For the most efficient air circulation, the oven must be installed in accordance with the dimensions shown in Figure 1-2.

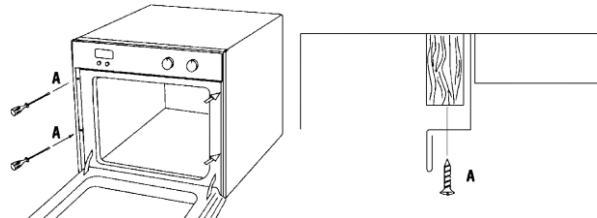

- The back panel of the cabinet should be removed to allow free circulation of air. Panel where the oven is placed should have a free space at least 7cm at the back of the oven.

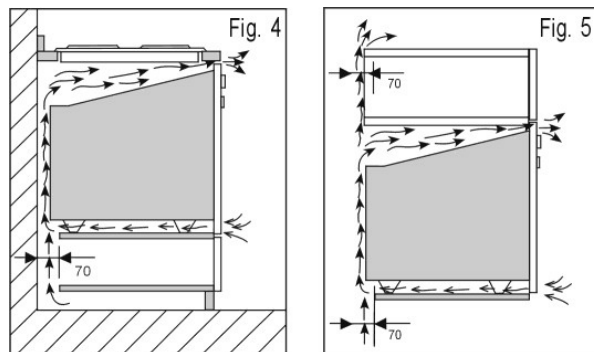

NOTED :

If the oven will be installed together with another oven, follow the instructions on the other oven’s guide book.

- The oven will become hot when in use. Be careful and avoid touching the heating elements inside the oven.
- The reachable components can be hot when in use. Keep children away from the oven.
- Do not use abrasive or sharp cleaner to clean the oven door’s glass as it may scratch and break the glass. For a built-in oven, the cabinet should be compatible with the oven.

Furniture panels around the oven must be heat-resistant, especially if the furniture are made of plywood. The plywood adhesive should be resistant to heat of 120°C. Plastic or adhesive that is not heat resistant to the temperature may change the shape or fall off.

To meet the safety measures, after the oven is installed, avoid any contact with components that are connected to electricity.

All the components with protecting function should be installed accordingly and cannot be detached without the help of tools.

Electrical Connections

This oven should be installed properly to secure the electrical appliance's safety. During the installation and maintenance process, the plug must be detached from the electrical socket; circuit breaker must be turned off or disconnected. Electrical connections should be established and completed before oven is installed on the cabinet.

Make sure that:

- a. The electricity has enough voltage.
- b. The cables are in good condition.
- c. Cables' diameter should meet the requirements of installation.

Electrical cable for the oven should be standardized with 3 pole power cords with the cross-sectional area of 1,5 mm² (1 current + 1 neutral + arde) that should be connected to a single-phase electric power 220-240V through a CEI 60083 standardized electrical socket with (1 current + 1 neutral + arde) nodes or a device that disconnects all the poles according to general electrical installation requirements.

NOTED :

- Grounding cable (green-yellow) is connected to the oven terminal and must be connected to electric power's grounding terminal.
- After the installation process is completed, the electricity from the oven to the power source should be able to be disconnected with an easily accessible plug or using a switch on electric wires where the oven is placed according to installation regulation. Circuit breaker where the oven is installed should have the capacity of 16 ampere.
- If the cable is broken, cable should only be replaced by MODENA or their service agent, or a similar qualified technician to avoid electrical hazard.


MODENA is not taking any responsibilities after any accidents caused by the grounding that is not installed or not functioned properly.

Call a professional electrician if you need some changes on your house's electricity installation.


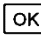
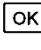
If problem occurs, remove the plug from the socket or disconnect the circuit breaker in the part of the electrical network where the oven is installed.




PART 4 : HOW TO USE


Operation


Press the button  to turn the oven on. When turned on, the display will light up and the time of day will be shown.

Programme/Function

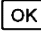

To select a function, press the  button to toggle through the functions and press  once you have reached the required function. Press the  button to enter the temperature(°C), power(W) or weight(g) mode depending on what function has been selected.

To adjust temperature, power or weight, use the  /  keys followed by  to confirm.

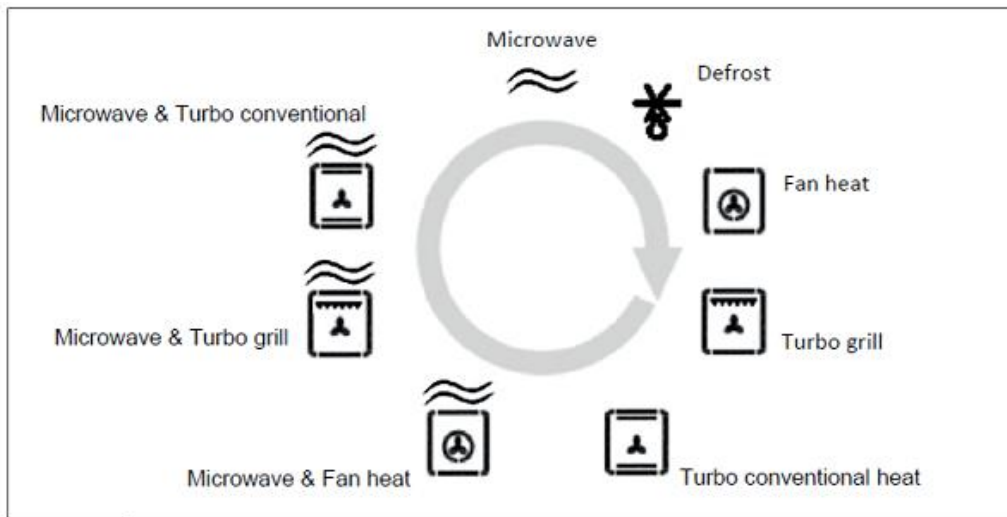

Once confirmed, press the  button to start cooking. The main timer will show the actual temperature, with the set temperature shown above this.



Light Function








Press the  button once to turn the internal microwave oven light on & off. The lights will automatically turn off after 3 minutes of no operation. When the light is activated the  symbol will be shown on display.

Child Lock


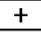

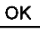
Hold the  button for 2-3 seconds to activate the child lock. To deactivate, press and hold the button  again for 2-3 seconds.

When the Child Lock is activated, the  symbol will be shown on the display.

Alarm setting

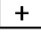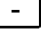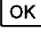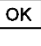
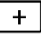

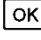
To set the Alarm/minute minder, press the  button until the  symbol starts to flash. Use / keys to adjust the time, and then press  to confirm. If you want to cancel the alarm, set the alarm time back to '0.00' and press  to confirm. When the time is up, the alarm will sound for 90 seconds, and the  symbol will begin to flash. To stop the alarm, press any button.





Setting the time

To set the time, turn the oven on, and then press and hold the  button for 3 seconds until the time begins to flash. Adjust the time using the / keys and then press  to confirm.

When the oven is first turned on or restarts, the time must be set before using the oven.


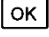
Duration Cooking(0-10hrs)

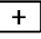Once a function and temperature have been selected, press the  button for 3 seconds until the time begins to flash. Adjust the time using the / keys and then press  to confirm.

Once the time is up, the alarm will sound and the oven will switch off. Press any of the buttons to turn off the alarm /,  and .

To cancel Duration cooking set the cooking time to '0,00' and confirm.


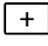







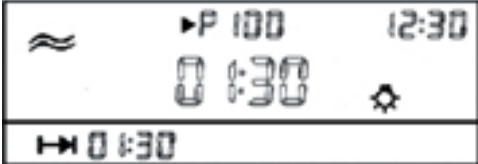



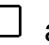
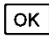

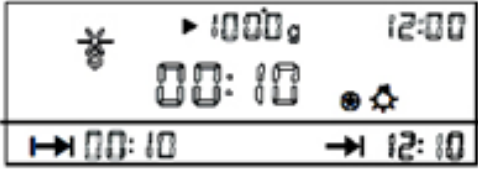
End Cooking Time →


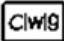
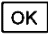

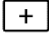

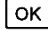

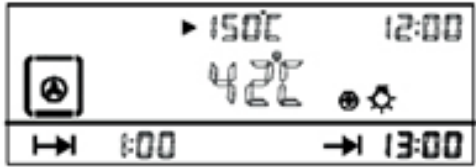

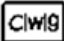

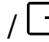
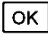
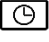
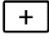

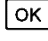



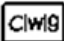

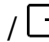
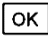
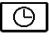





Once the Duration cooking time has been set, press  twice and the End cooking time → should start to flash. Adjust the time to the time you wish cooking to stop and press  to confirm.


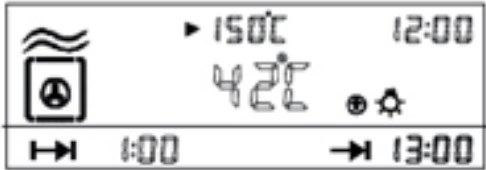


Your oven will then work out when to turn on, so that it cooks for the required duration time, and finishes at the required end time. E.g. Duration time set at 30minutes, and the end time set to 18.15, the oven will automatically turn on at 17.45 and cook for 30 minutes on the set function and temperature (start time=End time-Duration time)


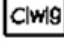

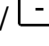
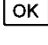

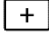
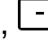
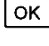

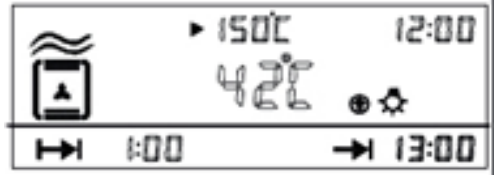
MICROWAVE OVEN FUNCTIONS.

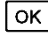Press the  button to select the following functions.

Function	Description	Display
	<p>Microwave – Default power P100 (power range P10 – P100)</p> <p>To adjust the power, press  /  until the correct power is reached followed by </p> <p>Default time is 30 seconds. To adjust the time press the  button followed by the  /  and  to confirm.</p> <p>The time will increase in 30 seconds increments (Max 60 mins).</p> <p>Note The Duration time when using the microwave function will display ‘ minutes : seconds’, in all other function it will show ‘ hours : minutes’.</p> <p>Finally press  to start the program.</p>	
	<p>Defrost – Default weight 1000g (weight range 100 – 2000 g)</p> <p>To adjust the weight press the  button followed by the  /  and  to confirm.</p> <p>Finally press  to start the program. The default time will be adjusted according to the set weight (See the ‘ Defrost time table ‘ for more info)</p>	







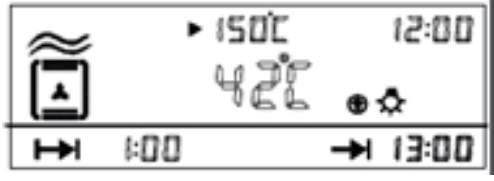
	<p>Fan Heat – Default temperature 200 °C</p> <p>To adjust the temperature press  followed by Δ / ∇.</p> <p>Press  to confirm.</p> <p>The default time is 1.00 hr. To adjust the time, press the  button followed by the  ,  and  to confirm.</p> <p>Finally press  to start the program</p>	
	<p>Turbo Grill – Default temperature 200 °C (Temperature range 50 - 220 °C)</p> <p>To adjust the temperature press the  button followed by the  /  and  to confirm.</p> <p>The default time is 1.00 hr. To adjust the time, press the  button followed by the  ,  and  to confirm.</p> <p>Finally press  to start the program</p>	
	<p>Turbo Conventional – Default temperature 200 °C (Temperature range 50 - 220 °C)</p> <p>To adjust the temperature press the  button followed by the  /  and  to confirm.</p> <p>The default time is 1.00 hr. To adjust the time, press the  button followed by the  ,  and  to confirm.</p> <p>Finally press  to start the program</p>	







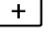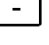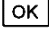

	<p>Microwave & Fan heat – Microwave Default power P50 (power range P10 – P50)</p> <p>Fan heat default temperature 200 °C (Temperature range 50 - 220 °C)</p> <p>Press CWIG once to enter the microwave power mode, and then again to enter the fan heat temperature mode. These can both then be adjusted using the + / - and OK to confirm.</p> <p>The default time is 1.00 hr. To adjust the time, press the ⌚ button followed by the + , - and OK to confirm</p> <p>Finally press ▶ to start the program.</p>	
	<p>Microwave & Turbo Grill – Microwave Default power P50 (power range P10 – P50)</p> <p>Fan heat default temperature 200 °C (Temperature range 50 - 220 °C)</p> <p>Press CWIG once to enter the microwave power mode, and then again to enter the fan heat temperature mode. These can both then be adjusted using the + / - and OK to confirm.</p> <p>The default time is 1.00 hr. To adjust the time, press the ⌚ button followed by the + , - and OK to confirm</p> <p>Finally press ▶ to start the program.</p>	

	<p>Microwave & Turbo convectional heat – Microwave Default power P50 (power range P10 – P50)</p> <p>Fan heat default temperature 200 °C (Temperature range 50 - 220 °C)</p> <p>Press  once to enter the microwave power mode, and then again to enter the fan heat temperature mode. These can both then be adjusted using the  /  and  to confirm.</p> <p>The default time is 1.00 hr. To adjust the time, press the  button followed by the ,  and  to confirm</p> <p>Finally press  to start the program.</p>	
---	---	--

AUTO COOKING

Example

	<p>Milk (Auto Program)</p> <p>Press the auto program button until the milk symbol is displayed.</p> <p>Press  to enter the Weight selection. use the  /  to adjust the weight and  to confirm.</p> <p>The default time will be adjusted according to the weight selected</p> <p>Finally press  to start the program.</p>	
---	---	--

Symbol	Default Weight	Weight Alternatives (g)	Function	Duration (Minutes)
 Milk	250 g	250	Microwave	2
		500	Microwave	4
 Soup	500g	500	Microwave	19
		800	Microwave	22
 Noodles	300g	300	Microwave	5
		600	Microwave	8
 Vegetable	200g	100	Microwave	2
		200	Microwave	4
		300	Microwave	5
		400	Microwave	6
		500	Microwave	7
		600	Microwave	8
 Bread	200g	100	Microwave	1
		200	Microwave	2
		300	Microwave	3
 Fish	500g	100	Microwave	3
		200	Microwave	5
		300	Microwave	6
		400	Microwave	7
		500	Microwave	8
		600	Microwave	9
		700	Microwave	10
		800	Microwave	11
		900	Microwave	12
1000	Microwave	13		
 Meat	500g	200	Microwave	7
		300	Microwave	8
		400	Microwave	10
		500	Microwave	12
		600	Microwave	14
		800	Microwave	16
		1000	Microwave	19
 Chicken	1000g	200	Microwave + Grill	15
		400	Microwave + Grill	20
		600	Microwave + Grill	25
		800	Microwave + Grill	30
		1000	Microwave + Grill	32
		1200	Microwave + Grill	35
		1400	Microwave + Grill	40
		1600	Microwave + Grill	46
		1800	Microwave + Grill	52
2000	Microwave + Grill	56		

DEFROST TIME TABLE

The maximum weight for defrost is 2000g. The default defrost time will be adjusted according to different weight selected

WEIGHT (GRAMS)	TIME (MINUTES)	WEIGHT (GRAMS)	TIME (MINUTES)
100	3	1100	22
200	5	1200	24
300	6	1300	26
400	8	1400	28
500	10	1500	30
600	12	1600	32
700	14	1700	34
800	16	1800	36
900	18	1900	38
1000	20	2000	40

PART 5 : MAINTENANCE

- Do not pull on the cable from the wine cellar's power cord from the outlet.
- Please clean the condenser once every two years (cooler back surface of the metal mesh) and the interior once a year. Please pull out the power plug and empty wine cooler when cleaning process, then scrub gently with a damp cloth.
- Wine cooler surface condensation may occur especially on glass door surface in moisture environment or in the rain. If this happens, please use a dry cloth to dry the surface.
- In order to ensure the long-term normal usage of wine cooler, please check the function regularly and if there is any abnormal usage, please notify the MODENA Call Center.

NOTE :

For optimum performance and prolong the lifetime, it should always pay attention for product maintenance. Please turn off the power and unplug the power cord before maintenance

First time usage

- Clean the wine cooler interior.
- After cleaning and placing the wine cooler, let stand for 30 minutes then power on the device.

During a power outage

- Unplug the power cord.
- Re-plug the power cord 10-15 minutes after the power is back on.

Left unused for a long period of time

- Unplug the power cord.
- Remove all objects in the compartment
- Clean the inside of the compartment
- Leave the door open to completely dry the compartment and prevent fungi or bad smell.

Relocation

- Unplug the power cord.
- When moving the wine cellar, make sure not to damage the power cord.
- Avoid hitting the stairs, doorways, etc.
- Make sure that the content in the wine cellar bulkhead vacated or given on an empty space with foam

PART 6 : TROUBLESHOOTING


- Wait until the appliance has cooled down before attempting to clean it.
- Disconnect it from the power supply, either by pulling the plug out or switching off the power supply at the mains.
- Do not leave corrosive or acidic substances (lemon juice, vinegar, etc.) on enameled, painted or stainless steel parts.

Cleaning the Oven

- After finish used the oven, let the oven door is open for a few minutes so that the oven is no hot.
- The inside of the oven should ideally be cleaned after each use.
- Clean the oven if whilst the oven is still warm (no hot), so that the food spillages on the oven surface can be removed easily.
- Clean the rubber, stainless or parts are coated with enamel or chrome using a soft sponge and warm soapy water or liquid detergent that is not abrasive. Use special products to remove stubborn stains. After cleaning, dry the unit until it is completely dry.
- All accessories - with the exception of sliding shelves - can be washed like every day cooking equipment and also safe if washed using a dishwasher.
- Do not use any type of steam cleaners or high-pressure cleaning unit.

Change the Oven light


- Disconnect the oven from the power supply, either by pulling the plug out or by switching off the power supply at the mains;
- Remove the protection glass (A) and replace the burnt out bulb with one of the same type
- Replace the burnt out bulb with one of the same type.
- Installed the cover protection "A".

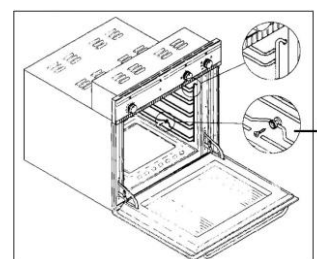

Removal of Oven Door

To water down in cleaning oven, door oven earn released by:

- To make cleaning easier, remove the oven door as follows: insert hook A (fig. beside) in hinge slot B.
- Half open the door and, using both hands, pull the door towards you until it becomes unhooked.
- To refit the door, carry out the same operation in reverse, taking care to introduce the two sectors C correctly.

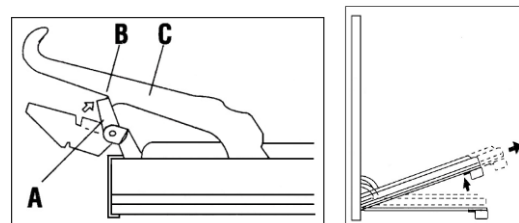

Clean the glass with a sponge and cleaning products are non-abrasive, then dry with a soft cloth. Do not use materials that are abrasive or have sharp surfaces as it can scratch the surface and cause the glass to crack.

Inspect the seal.

Check the seals around the doors on a regular basis. If the seal is damaged, contact the service center MODENA for repair or replacement. It is advisable not to use the oven for separately seals have not been replaced or repaired.

Make a check against the things below before contacting our Service Center, if there is interference on your gas oven:

Some of cooking instructions can be found in the below table:

PROBLEM	POSSIBLE CAUSE	RECOMMENDED ACTION
The upper crust is dark and the lower part too pale	Not enough heat from the bottom	<ul style="list-style-type: none"> • Use the natural convection position • Use deeper cake tins • Lower the temperature • Put the cake on a lower shelf
The lower part is dark and the upper crust too pale	Excessive heat from the bottom	<ul style="list-style-type: none"> • Use the natural convection position • Use lower side tins • Lower the temperature • Put the cake on a higher shelf
The outside is too cooked and the inside not cooked enough	Too high temperature	<ul style="list-style-type: none"> • Lower the temperature and increase the cooking time
The outside is too dry even though of the right color	Too low temperature	<ul style="list-style-type: none"> • Increase the temperature and reduce the cooking time.

PART 7 : PRECAUTION ACTION

Advice and precautions

This unit is designed and manufactured in compliance with international safety standards. Warnings and instructions below is for safety reasons and must be read and followed carefully.

General Safety Instructions

- The unit is designed for household use and for use indoors and is not intended for commercial use or industry.
- Unit should not be installed in an open area. Very dangerous to let the unit exposed to rain and typhoon.
- When move and install the unit always use the handrail available in the oven.
- Do not touching the side of the unit with bare feet or wet conditions or wet hands and feet.
- Unit should be used only by adults to prepare the dish accordance with the instructions in the guide book.
- Do not touch the heating element or a particular part of the oven door when the unit is used, since some parts become very hot. Keep children away from the oven and do not touch the hot parts of the electrical wiring directly.
- Make sure other electronic equipment not in contact with the hot parts oven.
- The open for ventilation and heat dissipation should not obstruct.
- Always grasp handle of the oven in the middle, the end part of the handle could be hot.
- Always wear gloves when placing or removing the cutlery into or out of the oven.
- Do not use aluminum foil to line the bottom oven.
- Do not put combustible materials in the oven, if the unit is accidentally turned on, these material can burn.
- Always make sure the knob on the "●"/"○" position when the unit is not in use.
- When you disconnect the power cord, always pull from the cable head, do not pull the cord.
- Always unplug the power cord from its source when doing maintenance or repairs to the unit. If there is damage on the unit, however, do not try to fix it by yourself. Repairs that carried out by inexperienced person could potentially cause injury or further damage to the unit. Contact MODENA authorized service center for repair.
- Do not laying or leaning heavy objects on the oven door.
- Do not let the children play with the unit.
- Units are not to be used by people (including children) with a lack of physical abilities, sensory, or mental, or lack of experience and knowledge about these products, unless they have been given supervision or instruction concerning the use of tools by a person responsible for their safety.
- Always turn off the oven before removing the oven rack and plates.
- During the cooking process, fats or oils should be treated with caution because this material is likely to cause a fire if it reaches a certain temperature..

- **When you smell gas, immediately release the regulator from the gas tank, do not light a fire and immediately contact MODENA Service Center.**
- Frequently check the gas hose, to make sure that gas hose is far from hot surface, and not in bent position. Make sure the outer surface of hose isn't cracked so that can be a leakage.
- Always remember that territory around the gas stove can be hot for the long time (around 30 minutes) after you turn off the gas stove.
- Do the routine service on your built-in oven every 3 (three) month, because if there is something wrong on your Built-in oven, you can immediately detect and repair.

PART 8 : SPESIFICATION

MODEL	BV 3435	BV 6435
Oven type	Combination oven (Microwave with convection oven)	Combination oven (Microwave with convection oven)
Installation	built-in	built-in
Cooking Program	Universal, Automatic, Microwave	Universal, Automatic, Microwave
Color	stainless	Black
Oven capacity (liter)	40	40
Power levels	10	10
Oven	Electric	Electric
Voltage	220 – 240 V / 50 Hz	220 – 240 V / 50 Hz
Rated Grill power output	2550 W	2550 W
Rated Microwave power output	1000 W	1000 W
Rated Combination power output	2550 W	2550 W
Rated Microwave power input	1500 W	1500 W
Product dimension (L x W x H) mm	595 x 610 x 455	595 x 610 x 455
Cut-out dimension (L x W x H) mm	565 x 550 x 450	565 x 550 x 450
Weight	36 kg	36 kg

Specifications of this appliance may change without notice to improve the quality of the product. Pictures in this manual are schematic and may not match your product exactly. Values stated on the machine labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the appliance, values may vary.

NOTES :

NOTES :

NOTES :



PT MODENA INDONESIA

Jl. Industri Raya I Blok D-8,
Jatiuwung, Tangerang 15135